



Normalizing Switching Period





Denormalizing





Waveforms with $I_1=10\text{ A}$

$L = 10\ \mu\text{H}$

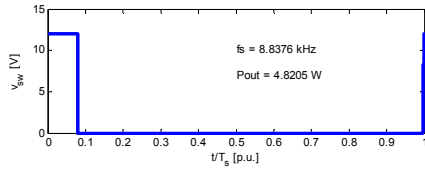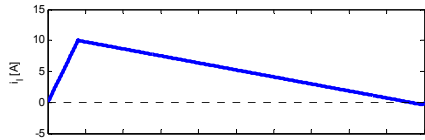

$L = 100\text{ nH}$

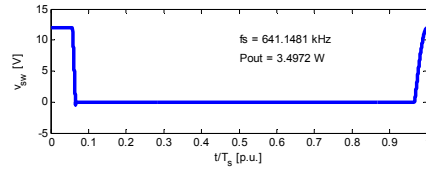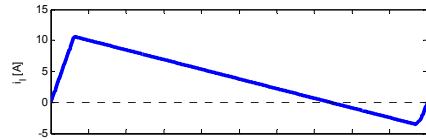

Increasing Peak Current

$L = 100\text{ nH}$

