


Fringing

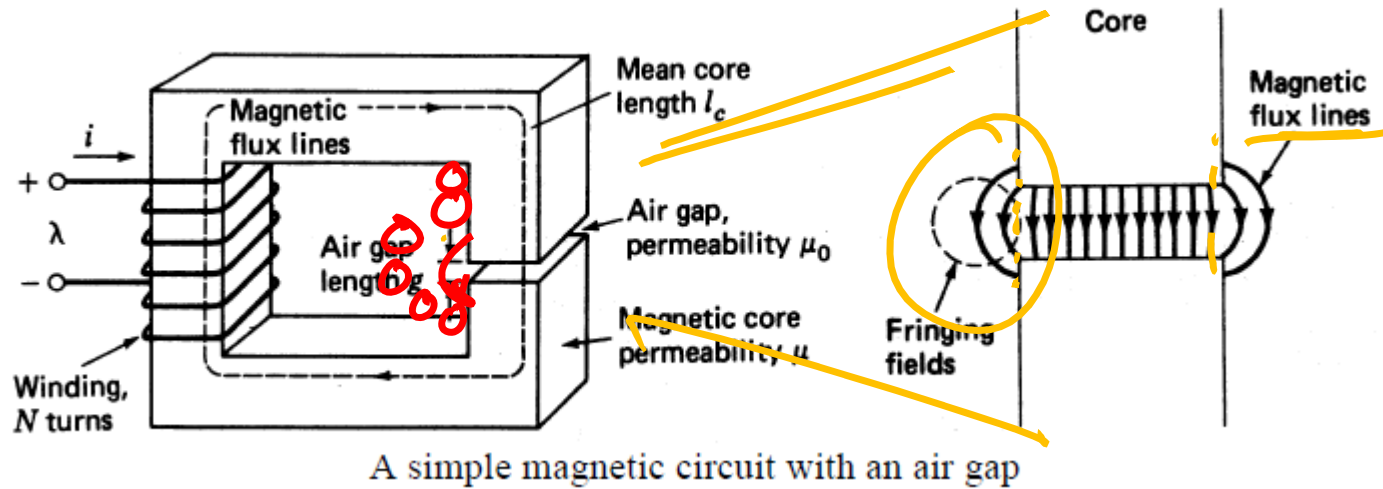

- Near air gap, flux may bow out significantly, causing additional eddy current losses in nearby conductors