ECE 325 – Electric Energy System Components
2- Fundamentals of Electrical Circuits

Instructor:

Kai Sun

Fall 2018

Content

- Fundamentals of electrical circuits (Ch. 2.0-2.15, 2.32-2.39)
- Active power, reactive power and apparent power (Ch. 7)
- Three-phase AC systems (Ch. 8)

Notations: Current and Alternating Current

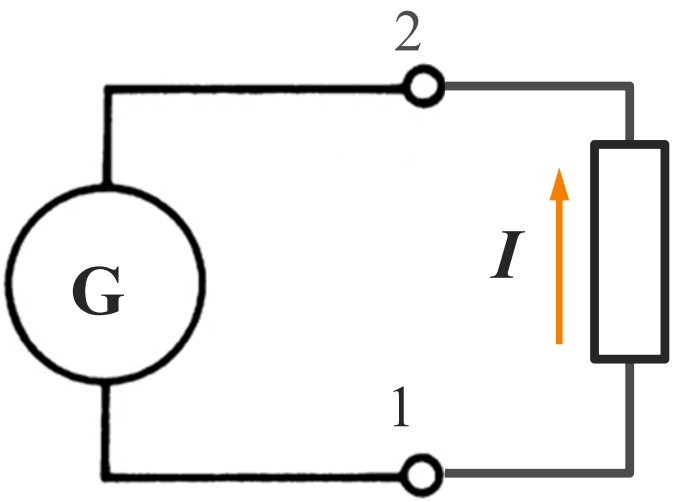

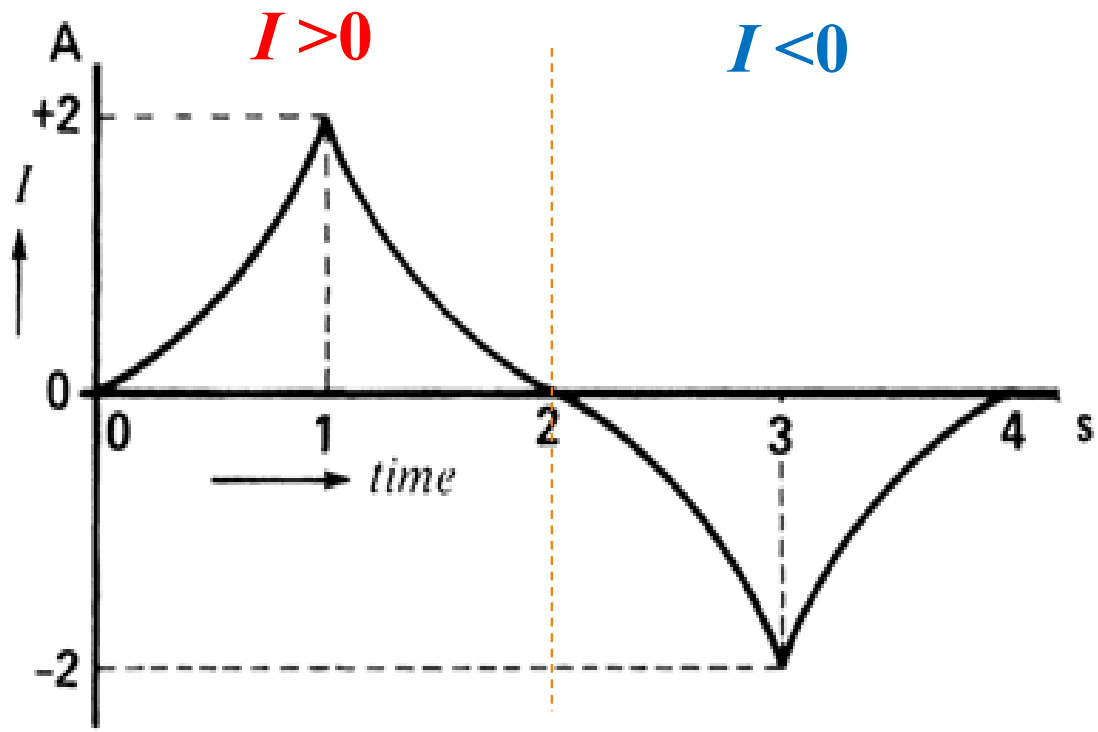

- **Arbitrarily** determine a positive direction, e.g. 1→2
  - If a current of 2A flows from 1 to 2, I=+2A
  - If a current of 2A flows from 2 to 1, I= -2A

Notations: Voltage

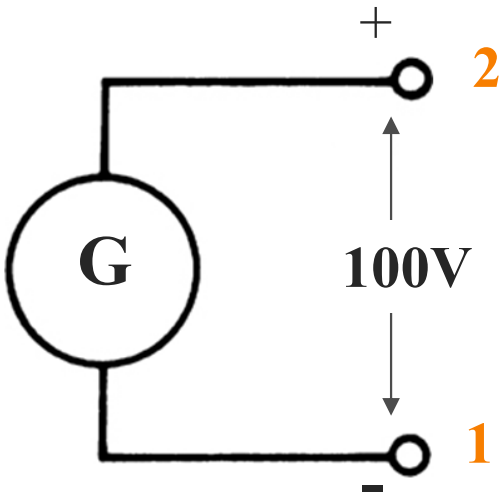

1. **Double-subscript notation**:

   E_{21}= **+100V** (the voltage between 2 and 1 is 100V, and 2 is positive w.r.t 1)

   E_{12} = **-100V**

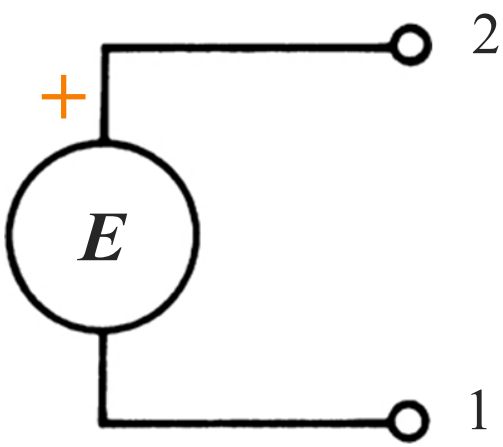

2. **Sign notation**:

   Arbitrarily mark a terminal with (+);
   E>0 if and only if that marked terminal is positive w.r.t the other.
   E.g. if E_{21}=+100V, E=E_{21}=**+100V**.

Both the double-subscript notation and sign notation apply to alternating voltage

Notations: Alternating Voltage

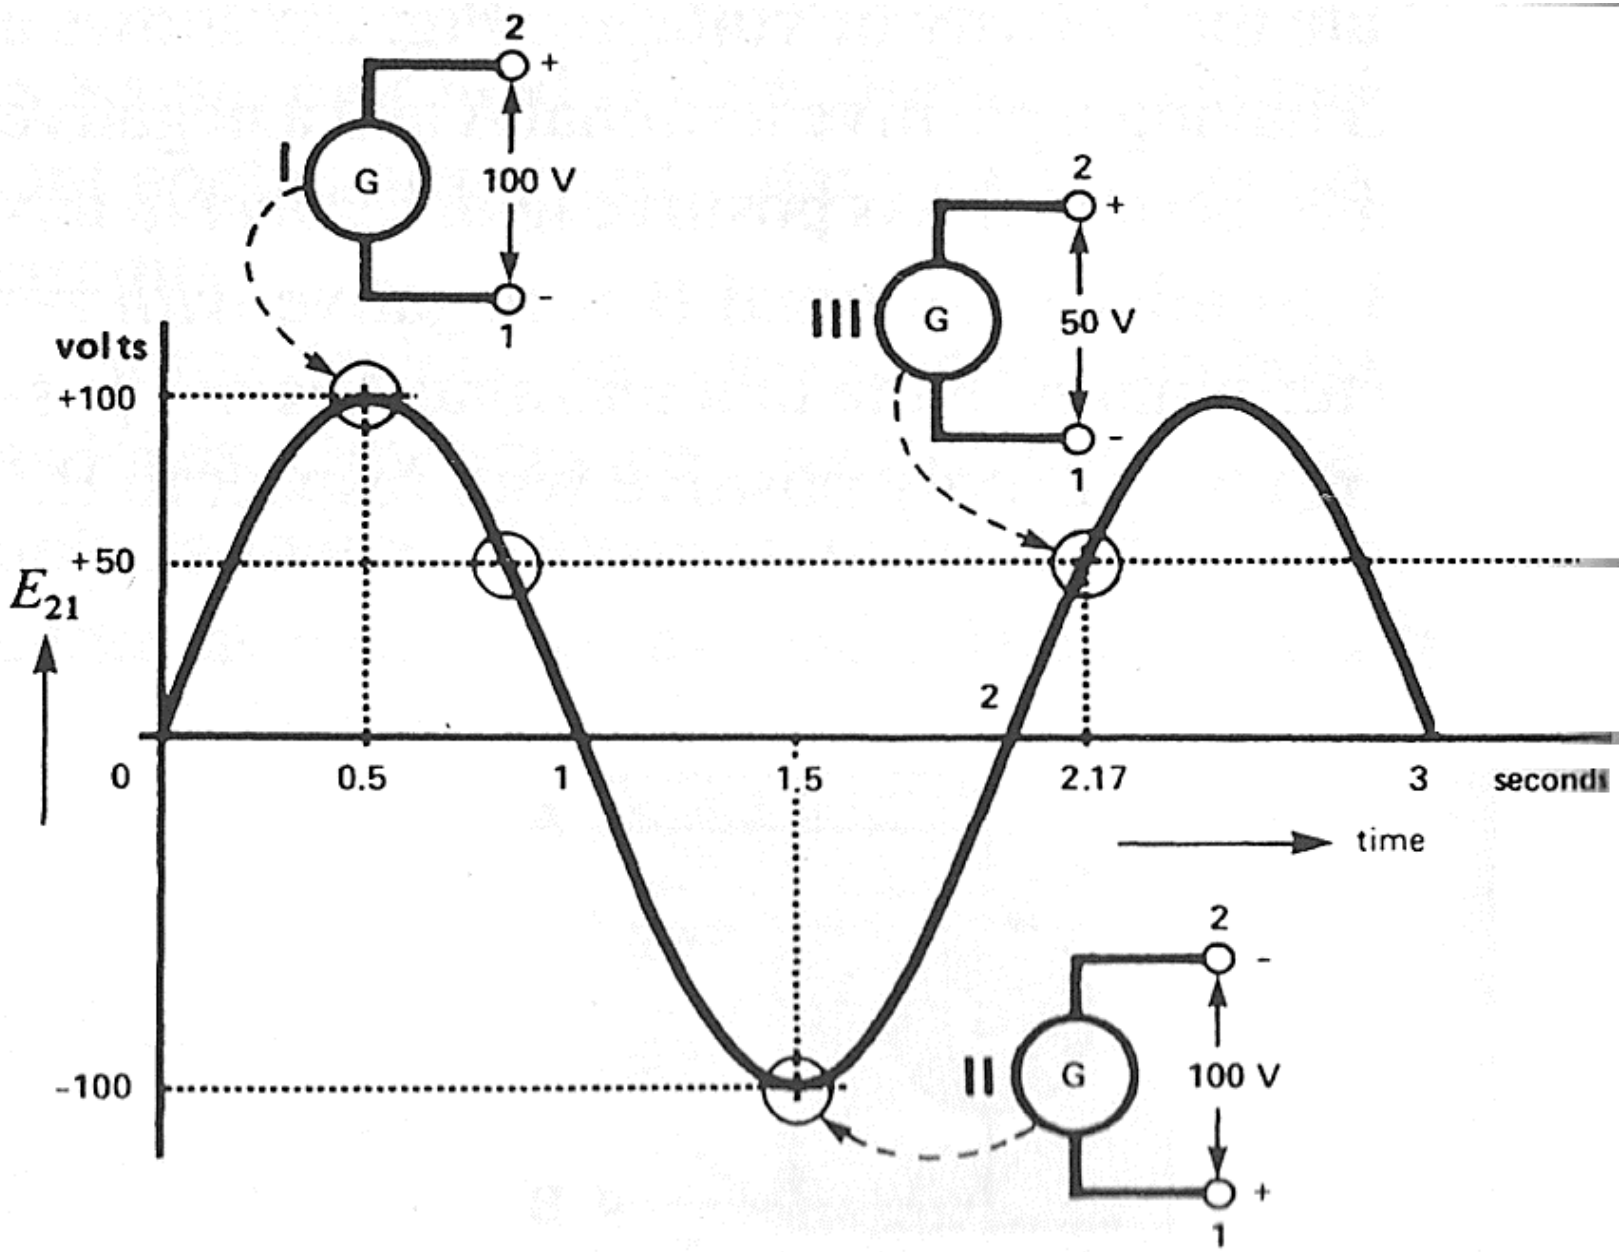

Notations: Sources and Loads

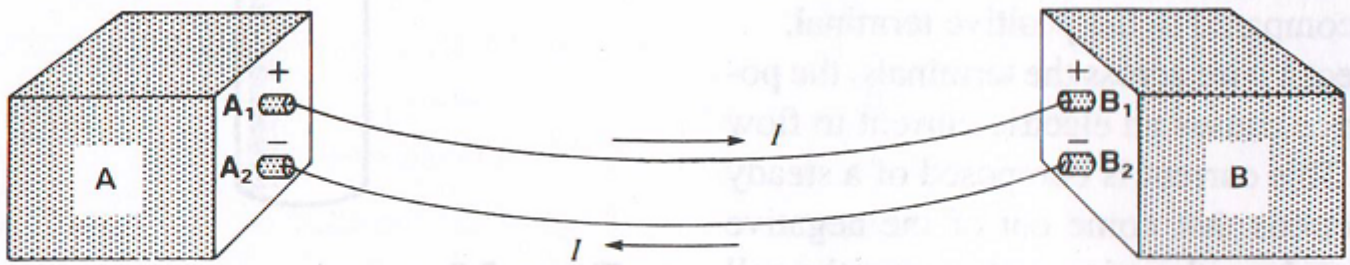

Figure 2.4
Distinction between a source and a load.

- **Definition**: given the instantaneous, **actual** polarity of voltage and **actual** direction of current
  - Actual Source: whenever current flows out of the terminal (+)
  - Actual Load: whenever current flows into the terminal (+)
- How about these?
  - Resistor, battery cell, electric motor, capacitor and inductor

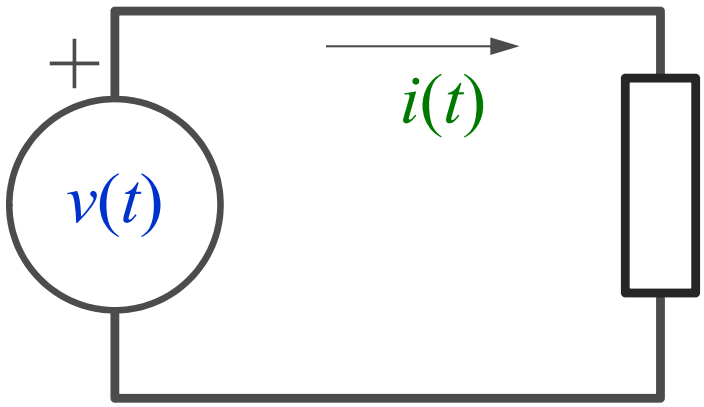

Resistor

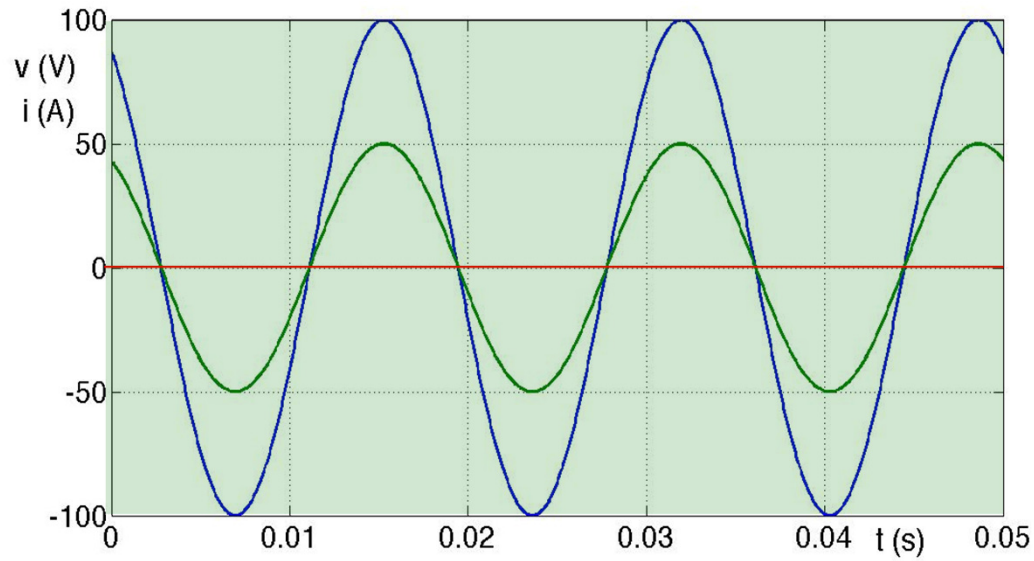

Inductor

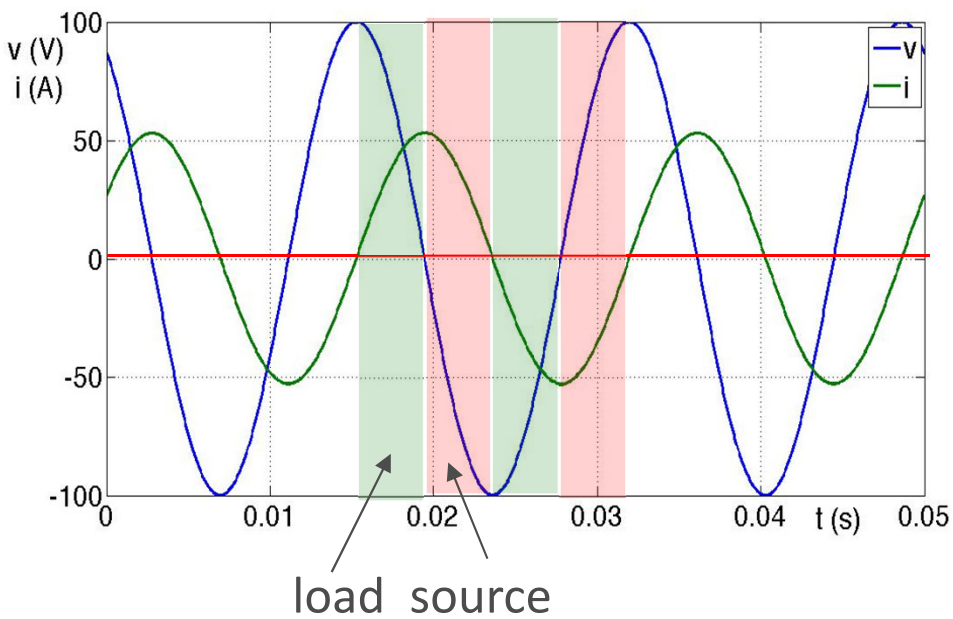

Capacitor

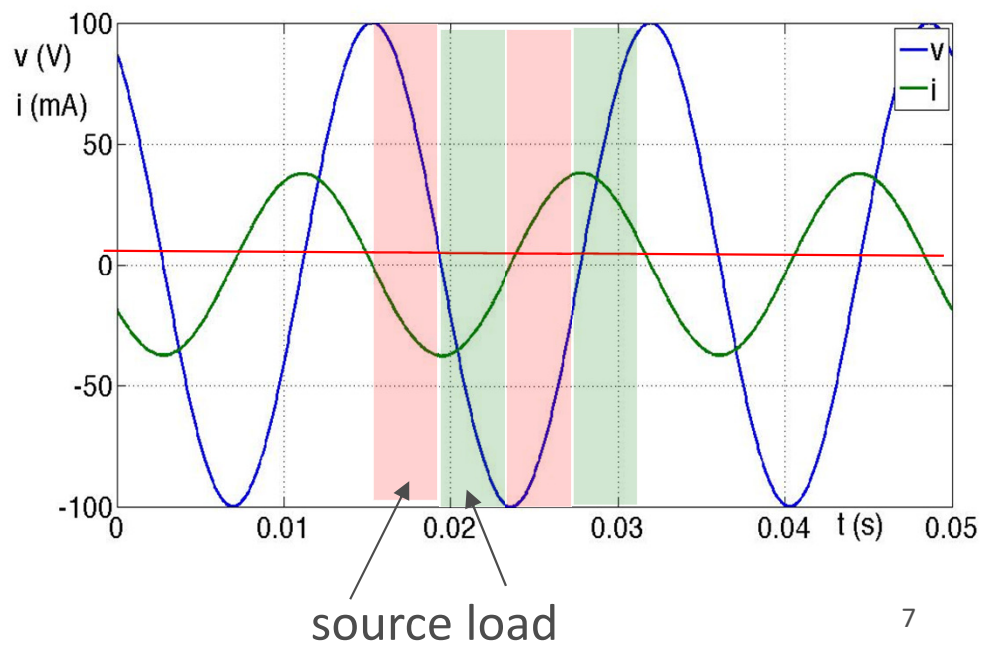

1-Phase AC System with Sinusoidal Voltage and Current

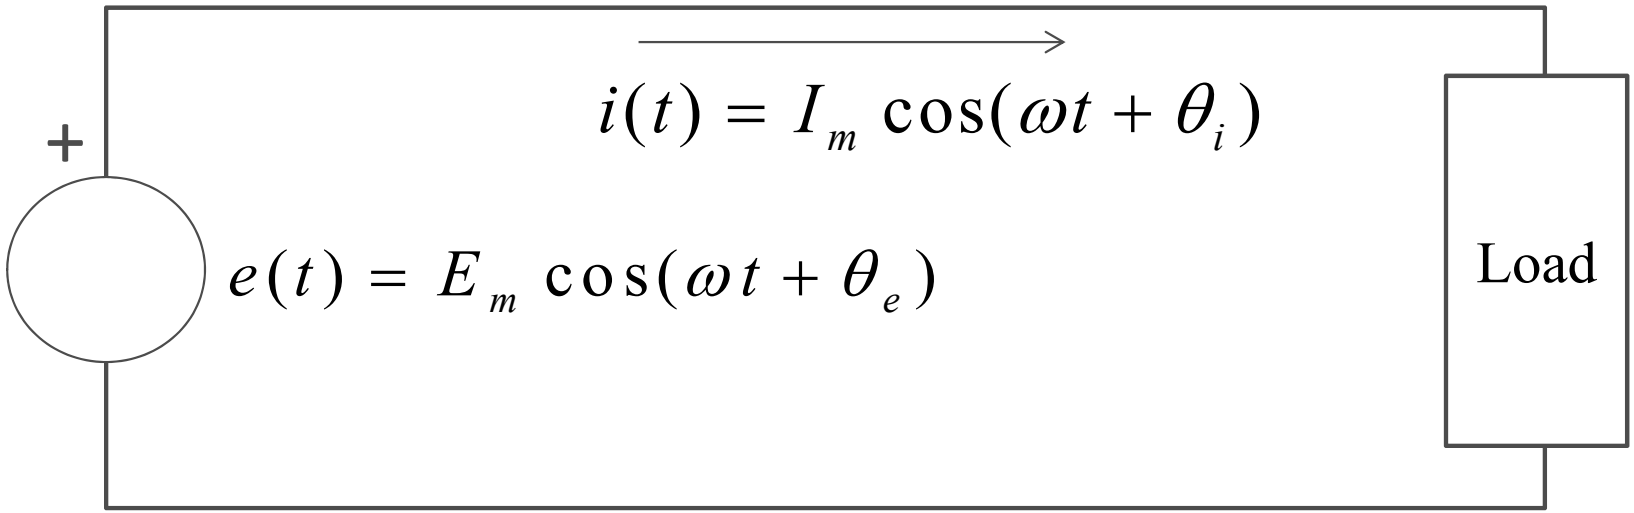

- e , i: instantaneous voltage (V) and current (A)
- E_m , I_m : peak values of the sinusoidal voltage (V) and current (A)
- $\omega = 2\pi f$ (rad/s): angular frequency, which is assumed constant here
- θ_e , θ_i : constant phase angles (rad. or deg.) of voltage and current
- $E_m/\sqrt{2}$, $I_m/\sqrt{2}$: RMS (root-mean-square, effective) values

$$\int_{t-T}^{t} [i(t)]^2 R dt = \frac{I_m^2 RT}{2} = I_{dc}^2 RT$$

Equal heating effects

$$\rightarrow I_{dc} = \frac{I_m}{\sqrt{2}} \triangleq \text{RMS value}$$

Phasor Representation

$$e(t) = E_m \cos(\omega t + \theta_e) = \sqrt{2}\,|E|\cos(\omega t + \theta_e)$$

$$i(t) = I_m \cos(\omega t + \theta_i) = \sqrt{2}\,|I|\cos(\omega t + \theta_i)$$

Constant ω

$$E = \frac{E_m}{\sqrt{2}}\angle\theta_e = |E|\angle\theta_e = |E|e^{j\theta_e}$$

$$I = \frac{I_m}{\sqrt{2}}\angle\theta_i = |I|\angle\theta_i = |I|e^{j\theta_i}$$

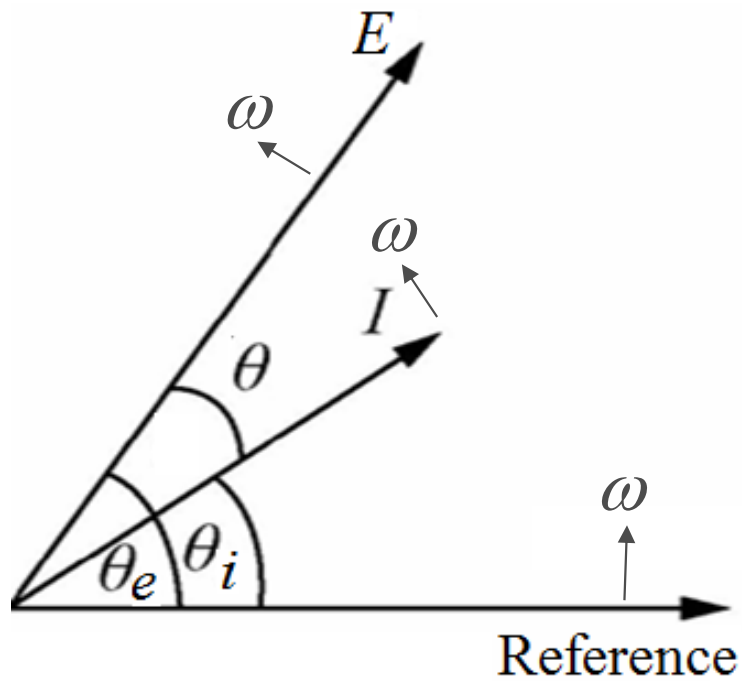

- E and I are called RMS phasors of $e(t)$ and $i(t)$;

  E leads I by $\theta = \theta_e - \theta_i$ or in other words, I leads E by $2\pi - \theta$
- Phasor:
  - mapping a time-domain sinusoidal waveform (infinitely long in time) to a single **complex number**
  - carries the amplitude and phase angle information of a sinusoidal signal of a common frequency (ω) w.r.t. a chosen reference signal.

Impedance

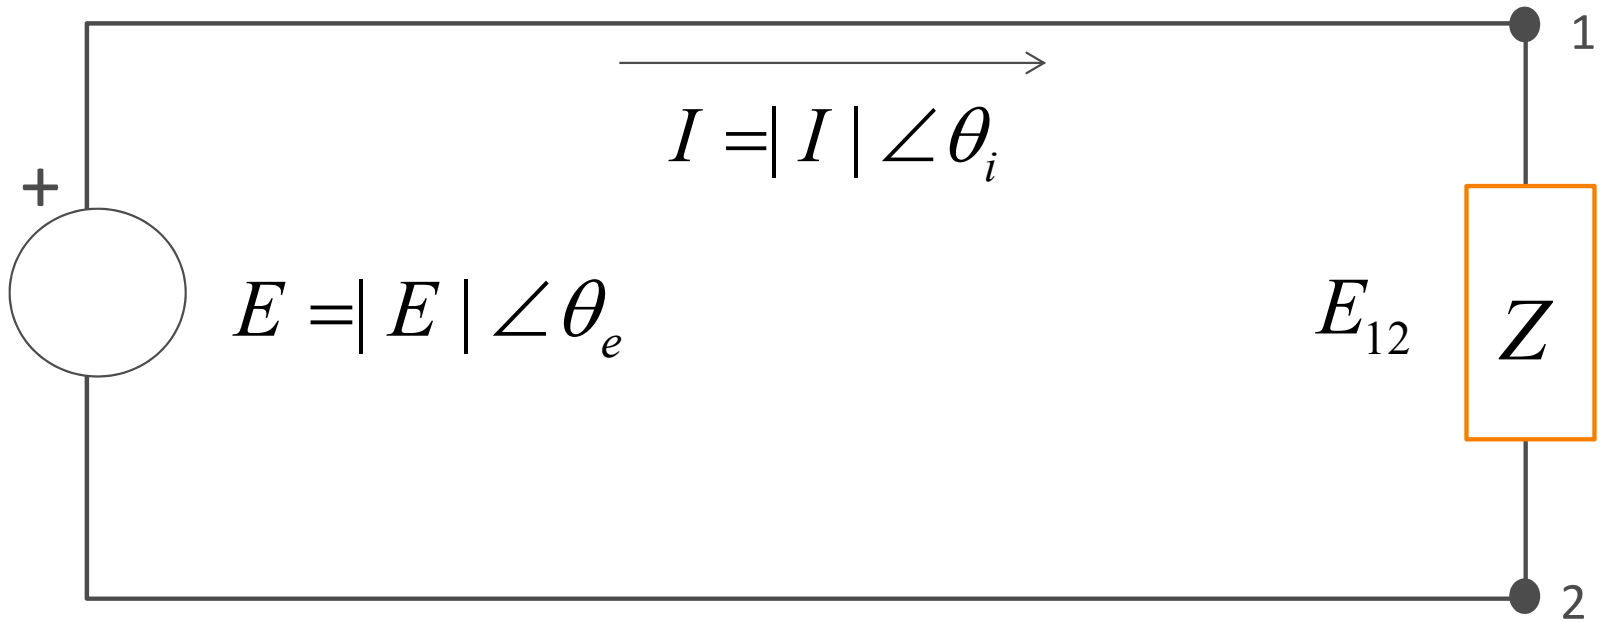

- Impedance is a complex number (in Ω) defined as

$$Z \overset{\text{def}}{=} \frac{E_{12}}{I} = \frac{E}{I} = \frac{|E| \angle \theta_e}{|I| \angle \theta_i} = |Z| \angle (\underbrace{\theta_e - \theta_i}_{\text{def}}) = R + jX$$

$$\theta_e - \theta_i \overset{\text{def}}{=} \theta \text{ (Impedance angle)}$$

Impedance of branch **1-2** = $\dfrac{\text{Voltage drop on } \mathbf{1\text{-}2}}{\text{Current flow into } \mathbf{1}}$

- Purely resistive: $Z = |Z| = R$
- Purely inductive: $Z = |Z| \angle 90^\circ = jX = jX_L = j\omega L$
- Purely capacitive: $Z = |Z| \angle -90^\circ = jX = -jX_C = -j\dfrac{1}{\omega C}$

Example 2-5

- Draw the phasor diagram of the voltage and current at a frequency of 60Hz. Calculate the time interval Δt between the positive peaks of E and I

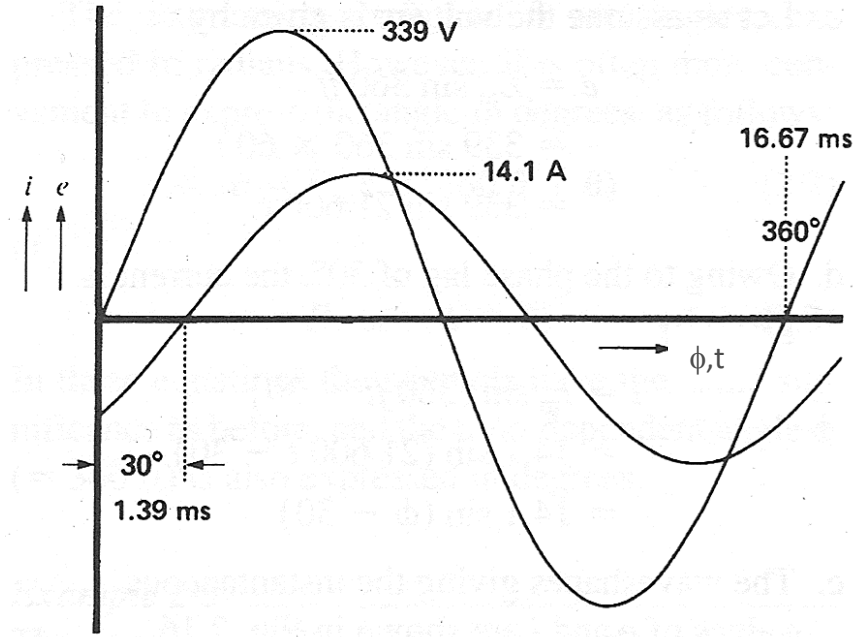

$$e(t) = 339\cos(21600t - 90^\circ)$$

$$i(t) = 14.1\cos(21600t - 120^\circ)$$

Solution:

$\omega = 2\pi f = 377$ (rad/s)$=21600$ (deg/s)

$|E| = 339/\sqrt{2} = 240$ (V)

$|I| = 14.1/\sqrt{2} = 10$ (A)

Choose an arbitrary reference to draw phasors E and I

$\Delta t = \theta/\omega = 30/21600 = 0.00139$ (s)

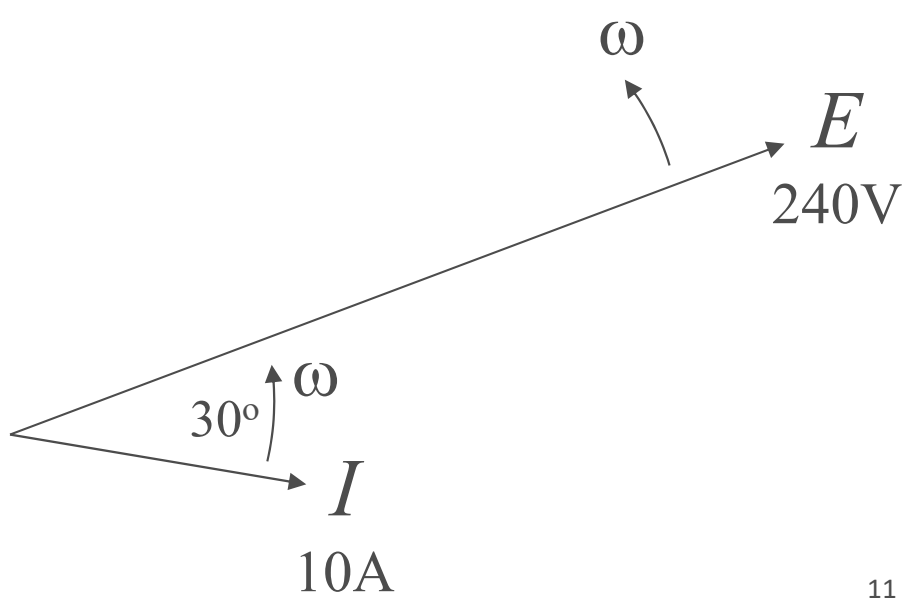

Kirchhoff's Voltage Law (KVL)

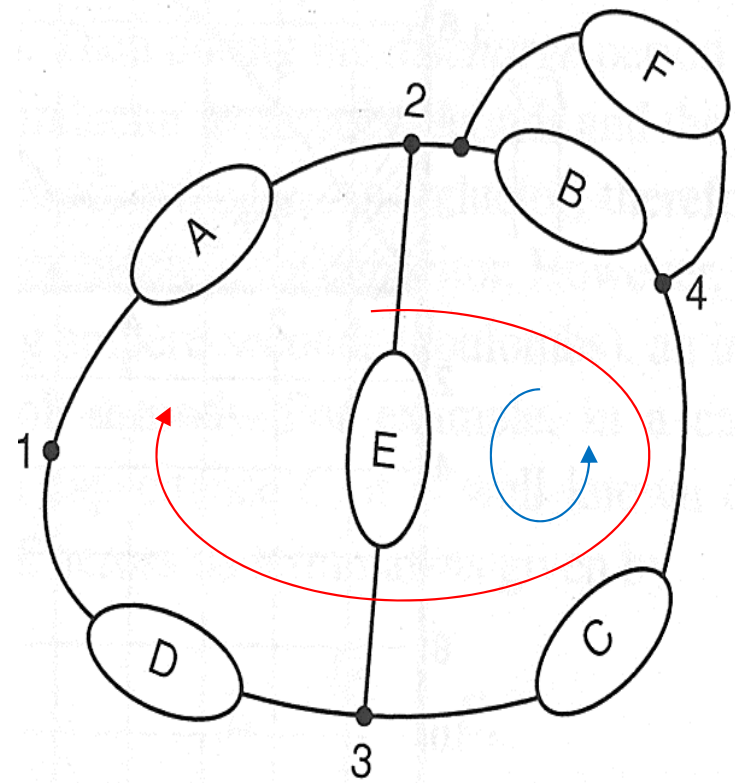

- The algebraic sum of the voltages around a closed loop (CW/CCW) is zero

  (Σ voltage rises = Σ voltage drops)

  – Applied to both instantaneous voltages or voltage phasors

- Loop 24312 (BCDA, CW):

  $E_{24}+E_{43}+E_{31}+E_{12}=0$ or

  $e_{24}+e_{43}+e_{31}+e_{12}=0$

- Loop 2342 (ECF, CCW):

  $E_{23}+E_{34}+E_{42}=0$ or

  $e_{23}+e_{34}+e_{42}=0$

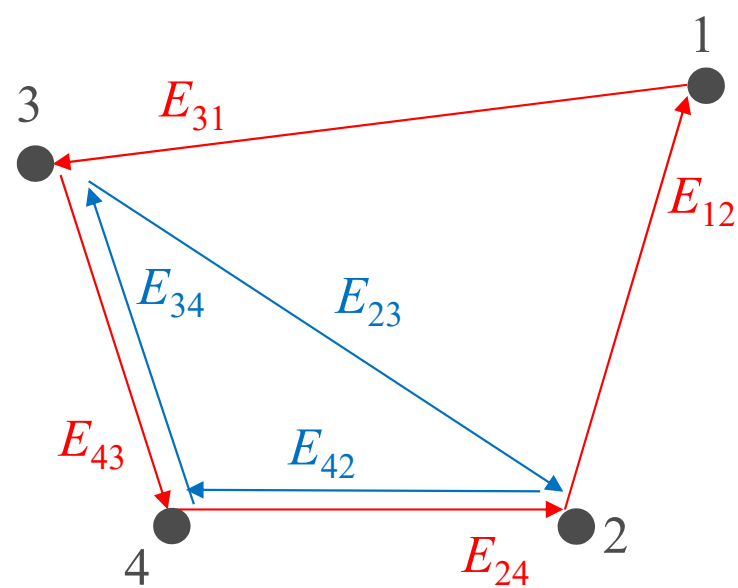

Kirchhoff's Current Law (KCL)

- The algebraic sum of the currents arriving at a node is equal to 0. (Σ currents in = Σ currents out)
- Node A:

$I_1+I_3=I_2+I_4+I_5$

or $i_1+i_3=i_2+i_4+i_5$

$I_1+I_3+(-I_2)+(-I_4)+(-I_5)=0$

or $i_1+i_3+(-i_2)+(-i_4)+(-i_5)=0$

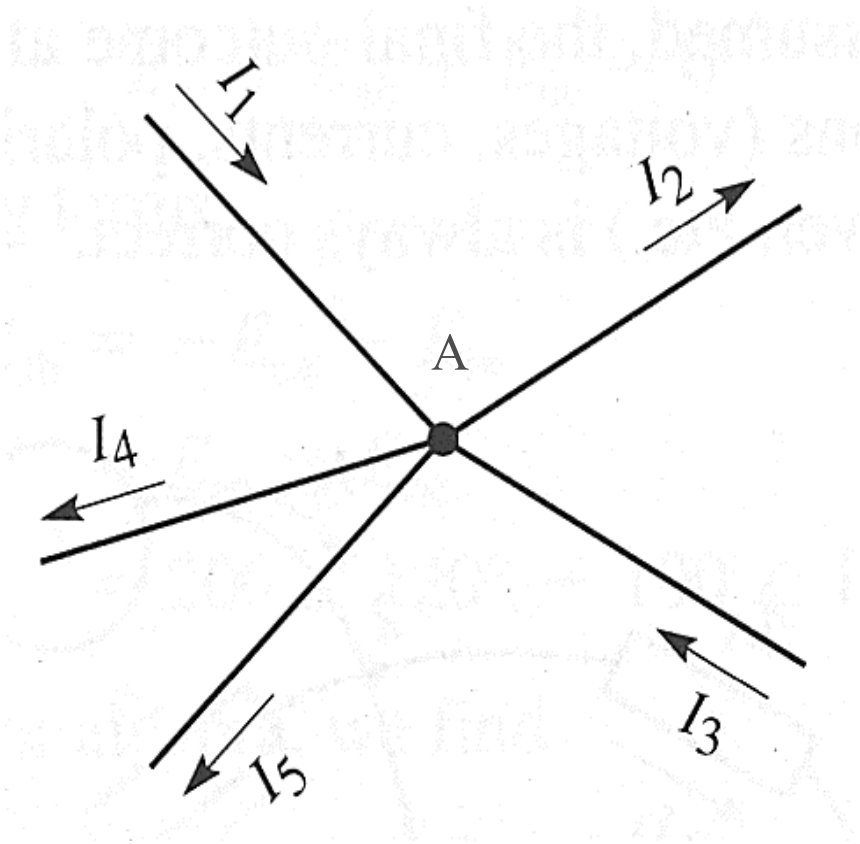

Kirchhoff's Laws and AC Circuits

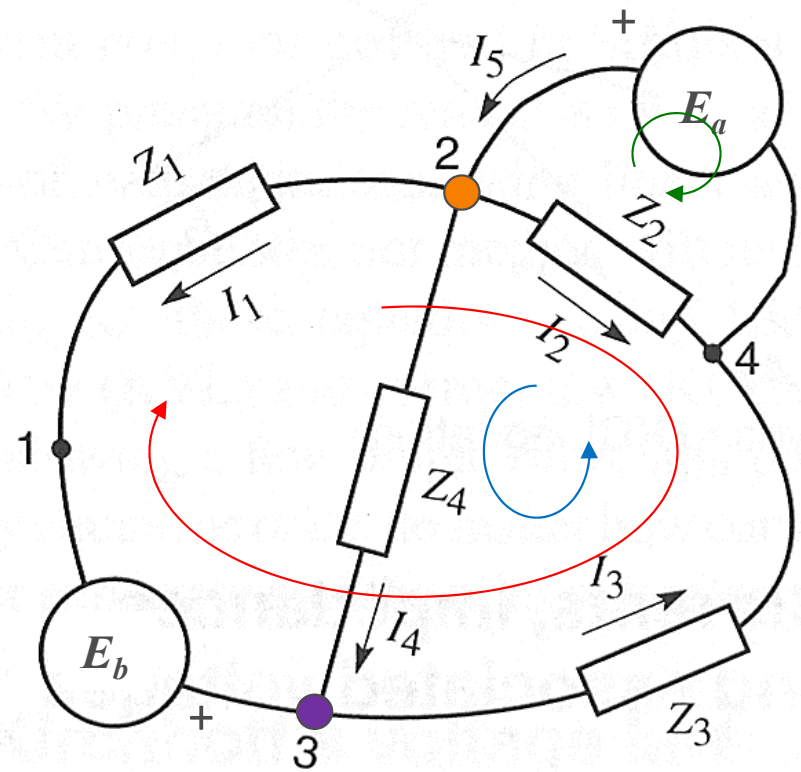

- **KVL**
  - Loop 24312, CW:

    $E_{24} + E_{43} + E_{31} + E_{12} = 0$

    $\boldsymbol{I_2 Z_2 - I_3 Z_3 + E_b - I_1 Z_1 = 0}$
  - Loop 2342, CCW:

    $E_{23} + E_{34} + E_{42} = 0$

    $\boldsymbol{I_4 Z_4 + I_3 Z_3 - I_2 Z_2 = 0}$
  - Loop 242, CW:

    $E_{24} + E_{42} = 0$

    $\boldsymbol{E_a - I_2 Z_2 = 0}$

- **KCL**
  - Node 2:

    $\boldsymbol{I_5 - I_2 - I_4 - I_1 = 0}$
  - Node 3:

    $\boldsymbol{I_4 + I_1 - I_3 = 0}$

Examples 2-14 to 2-16

Instantaneous Power

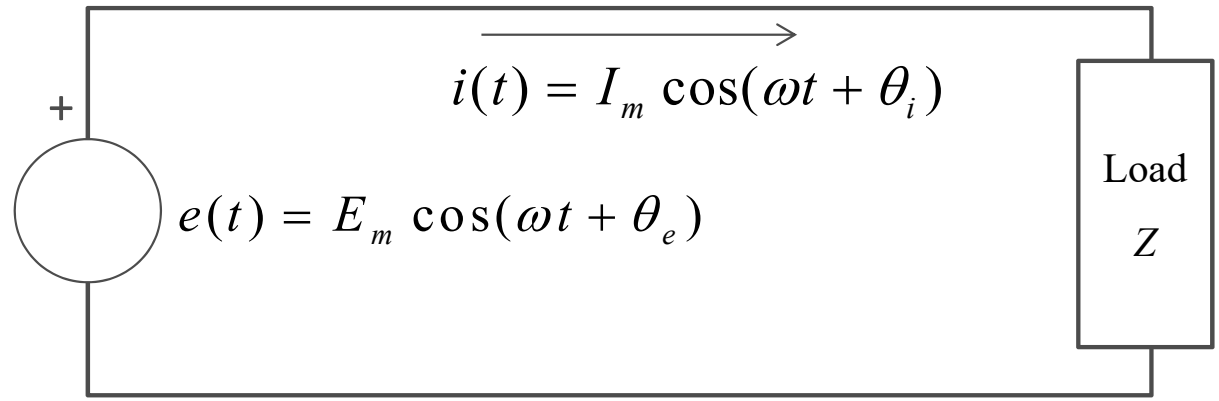

$\phi = \omega t$

Using trigonometric identity

$$\cos A \cos B = \frac{1}{2}\left[\cos(A - B) + \cos(A + B)\right]$$

Impedance angle: $\theta = \theta_e - \theta_i$
>0 for inductive load and
<0 for capacitive load

$$|E| = E_m / \sqrt{2}$$
$$|I| = I_m / \sqrt{2}$$

$$p(t) = e(t)i(t) = E_m I_m \cos(\phi + \theta_e)\cos(\phi + \theta_i)$$
$$= \frac{1}{2} E_m I_m \left[\cos(\theta_e - \theta_i) + \cos(2\phi + \theta_e + \theta_i)\right]$$
$$= \frac{1}{2} E_m I_m \left\{\cos(\theta_e - \theta_i) + \cos[2(\phi + \theta_e) - (\theta_e - \theta_i)]\right\}$$
$$= \frac{1}{2} E_m I_m \left\{\cos\theta + \cos[2(\phi + \theta_e) - \theta]\right\}$$
$$= \frac{1}{2} E_m I_m \left[\cos\theta + \cos\theta\cos 2(\phi + \theta_e) + \sin\theta\sin 2(\phi + \theta_e)\right]$$

$$p(\phi) = \underbrace{|E|\cdot|I|\cos\theta[1 + \cos 2(\phi + \theta_e)]}_{p_R} + \underbrace{|E|\cdot|I|\sin\theta\sin 2(\phi + \theta_e)}_{p_X}$$